


INSTALLATION INSTRUCTIONS FOR "J" BOX WATER QUICK DISCONNECT KIT # 152614

1. SLIDE THE FLOW CONTROL ONTO THE QUICK DISCONNECT 1/4" BLUE LINE AND SCREW IN THE THUMB SCREW.
2. USING THE TEE FITTING AND RETAINERS PROVIDED, TEE INTO THE 1/4" BLUE WATER LINE COMING FROM THE UMBILICAL.
3. PUSH IN THE QUICK DISCONNECT ONTO THE FITTING AND HOOK THE CLAMP TO THE RIM ON THE FITTING.

NOTE: A BARBED FITTING IS SUPPLIED WITH THIS KIT IS YOU WISH TO CONNECT DIRECTLY TO THE VALVE BLOCK OR SOME OTHER WATER SUPPLY.

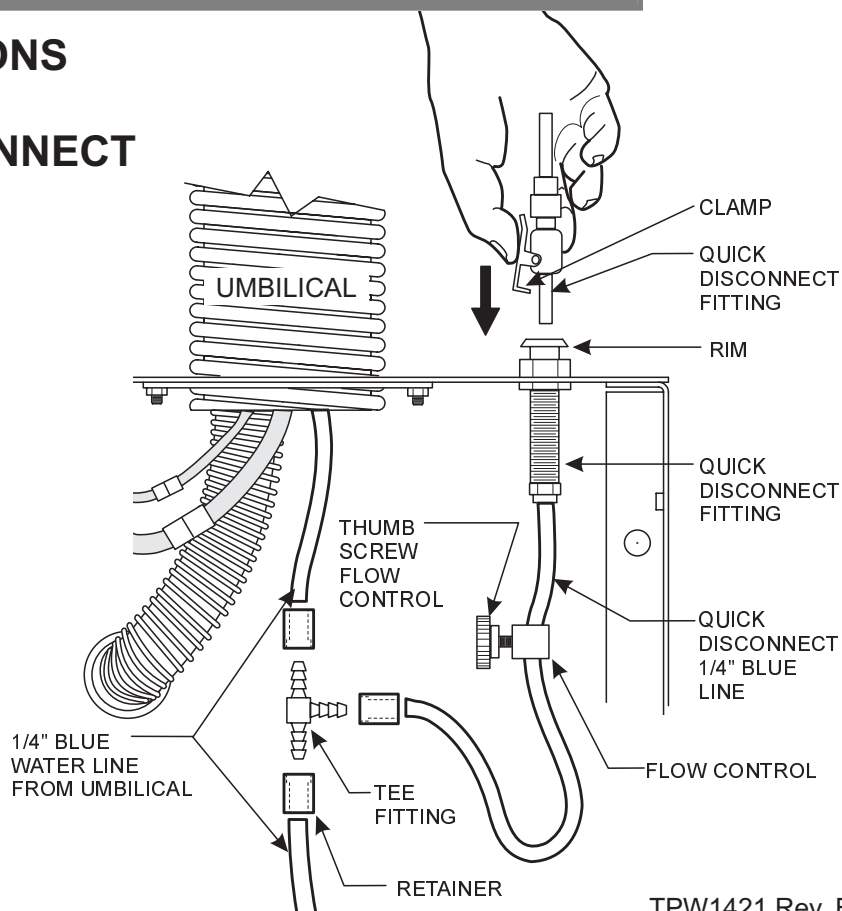

TPW1421 Rev. B


Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542

INSTALLATION INSTRUCTIONS FOR "J" BOX WATER QUICK DISCONNECT KIT # 152614

1. SLIDE THE FLOW CONTROL ONTO THE QUICK DISCONNECT 1/4" BLUE LINE AND SCREW IN THE THUMB SCREW.
2. USING THE TEE FITTING AND RETAINERS PROVIDED, TEE INTO THE 1/4" BLUE WATER LINE COMING FROM THE UMBILICAL.
3. PUSH IN THE QUICK DISCONNECT ONTO THE FITTING AND HOOK THE CLAMP TO THE RIM ON THE FITTING.

NOTE: A BARBED FITTING IS SUPPLIED WITH THIS KIT IS YOU WISH TO CONNECT DIRECTLY TO THE VALVE BLOCK OR SOME OTHER WATER SUPPLY.

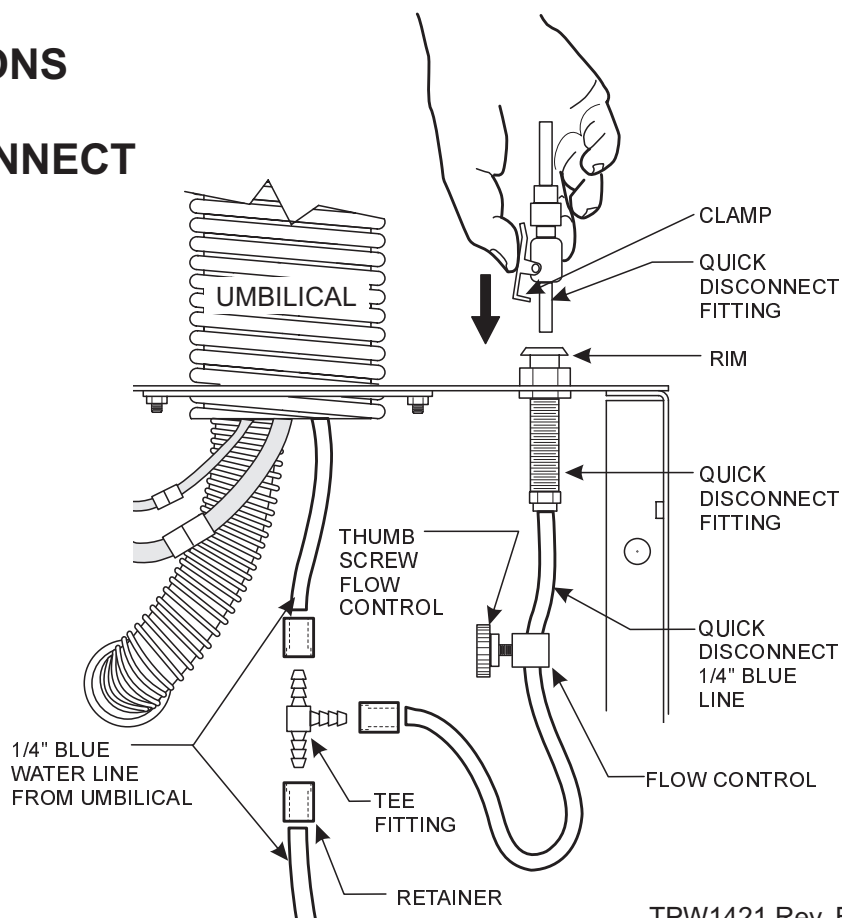

TPW1421 Rev. B

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542